

Battery Instructions for 9040 Portable Handsets

Please read carefully

The battery is a major source of problems as the handset needs a good charge from the battery to transmit and maintain its radio frequency signal to the DRM.

This signal is constant and is boosted when you receive or place a call. The proper charging method for all Transtalk batteries is as follows.

At the end of every day - each battery (or phone w/ battery attached) should be put on the charger for overnight charging. When the battery/phone is placed on the front charging slot - be sure to press the REFRESH button so that the battery is completely discharged and a 100% new charge in run on that battery. We DO NOT recommend putting the battery/handset on the charger throughout the day unless the battery needs a charge as the Ni-Cad battery's memory will not reset properly and if you are just "topping" it off - then the memory thinks that is all the charge it needs and does not function properly to specs. The back slot of the charger automatically starts the REFRESH cycle - but you have to remove the battery from the phone to charge it in the rear slot

